



TECHNICAL
SERVICE BULLETIN

NUMBER	16TSB-100A			TYPE	INFORMATION ONLY			
ROUTING	INSTALL	X	SERVICE	X	SALES		PURCH	
TITLE	1616*601B PLOW CONTROLLER MOUNT MODE BEHAVIOR (WON'T GO INTO MOUNT MODE)							
REV	A			ISSUED	11/21/2022		REVISED	10/15/2024
AFFECTS	1616*601B SNOWDOGG PLOW CONTROLLERS							
INFORMATION	<p>A change to the behavior of the SnowDogg plow controllers was made in the 2022-2023 to prevent accidental movement.</p> <p>It is now necessary to pause for ~1 second between entering FLOAT mode and entering MOUNT mode. If the operator attempts to enter MOUNT mode immediately after entering FLOAT, the controller will not allow it and the operator will need to leave FLOAT mode before trying again.</p> <p>This is intended to prevent the accidental entry into MOUNT mode while operating the plow in FLOAT mode and causing unexpected behavior.</p>							
INSTRUCTIONS	<p style="text-align: center;">TO ENTER MOUNT MODE</p> <ol style="list-style-type: none"> 1. PRESS DOWN FOR 1 SECOND UNTIL THE INDICATOR TURNS BLUE - THE PLOW IS IN FLOAT MODE 2. RELEASE THE BUTTON FOR 1 SECOND 3. PRESS DOWN FOR 1 SECOND UNTIL THE INDICATOR FLASHES RED - THE PLOW IS IN MOUNT MODE <p style="text-align: center;">PLEASE INCLUDE THIS INSTRUCTION WITH MOUNT TRAINING OF END USERS AND CUSTOMERS</p>							
REV NOTES	A - CLARIFIED AND ADDING EXPLICIT INSTRUCTIONS							